 


Dreamwills

— Filtration Bottle —

Fitness Filter

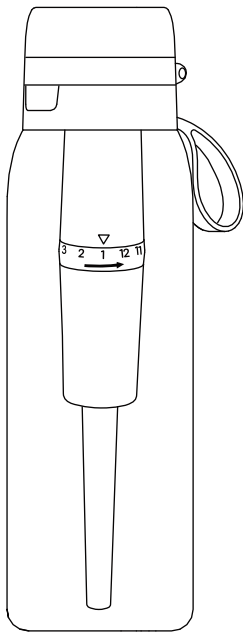

ANYWHERE ON THE GO!

Please Read Carefully Before Use

1. The product is in a sealed state at Factory, and it is normal that there will be a slight smell when it is opened for the first time.
2. Activate the filter before use.
3. To activate the filter, place the filter into a bowl of water for 2 minutes, or place the filter under running water for 2 minutes. This is only required to be done once per new filter.
4. Be careful not to fill the water bottle to the very top as it will over flow when the filter body housing is placed into the bottle.
5. Use a soft sponge to clean inside the bottle with a gentle detergent.
6. We recommend you change the filter every 2 months.


Storage

1. Clean and gently shake out the remaining water inside the filter and allow to dry in a cool place.
2. Place the filter cartridge in a sealed bag or film keeping out the atmosphere.


- ⚠ Do not fill the bottle and then freeze the contents, this may damage the bottle.
- ⚠ Do not use acidic substances, to avoid corroding the bottle.
- ⚠ Do not fill with hot water above 140°F or you will damage the carbon block cartridge. Alternatively, you can remove the filter and place boiling water in the stainless steel bottle.
- ⚠ Do not use steel wire scrubbers, corrosive liquid or harsh cleaning products to clean the bottle or filter.
- ⚠ Remove the filter if you are using your bottle to drink juice or a liquid with particles in it.

Fitness Filter

Bottle Material	BPA-Free Tritan Plastic
Filter	Coconut Shell Activated Carbon
Usage	Tap Water
Function	Reduce 99.9%Chlorine (Taste And Odor) Sediment, Particles
Lifespan	40Gallons 2Months

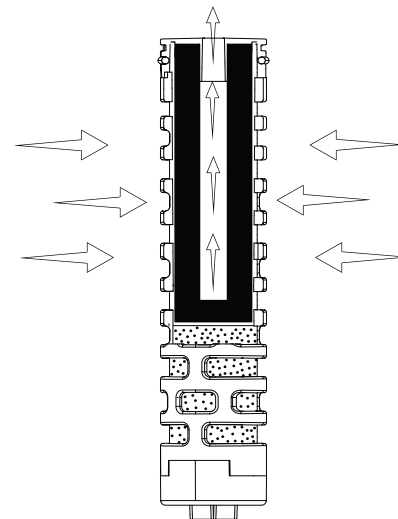 


Components

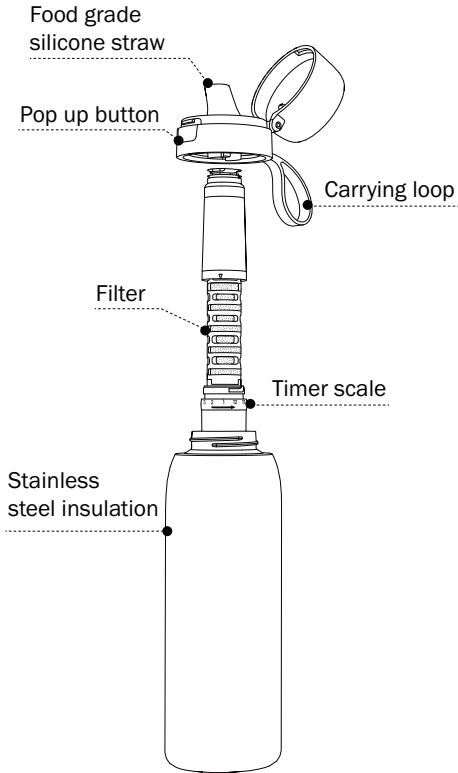 

How To Use Your Pure Clear Bottle

 1. With one hand, simply press the lid opening button and the lid will pop open.
2. To replace the lid, gently press the lid down until you hear a click.


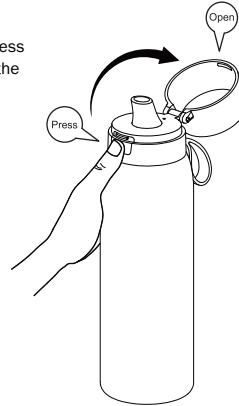


3. Twist the lid body anti-clockwise until it comes away from the body of the bottle.
4. The number represents the month, when you start using it in June, turn "June-6" under the triangle arrow and replace the cartridge with a new one in "August-8".

5. Line the arrow up with the correct month number 2 months in advance.



  6. Change the filter when the date corresponds to the filter change date.

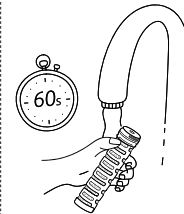


7. Rinse the filter under running water by 60 seconds

Removing And Adding A Filter


1. Twist the main body of the lid anticlockwise until it lifts from the bottle.
2. Remove the filter housing body.



 Take out the old filter element

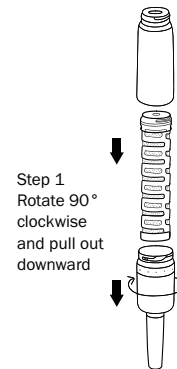

Replace with new filter element

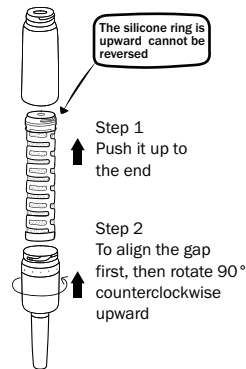 

- Rinse the filter under running water for 60 seconds before first use
- Change the filter every 2 months